


Instructions for use for a sporting child's cart

This manual contains important information about safety and the use for a sporting child's cart (hereinafter the cart) for already walking children. The cart represents a brand new means of transportation which is important to get acquainted with first and its proper use has to be learned both by a parent and a child. The cart is intended solely for manual pulling by one adult person and for carrying one stand-alone child aged approximately up to 4 years of age and up to 20 kg in weight. Read these instructions carefully before your first drive and familiarize yourself with the instructions for safe driving/riding, folding and cart maintenance.

CART'S LAYOUT AND DESCRIPTION IN STANDBY (UNFOLDED) STATE

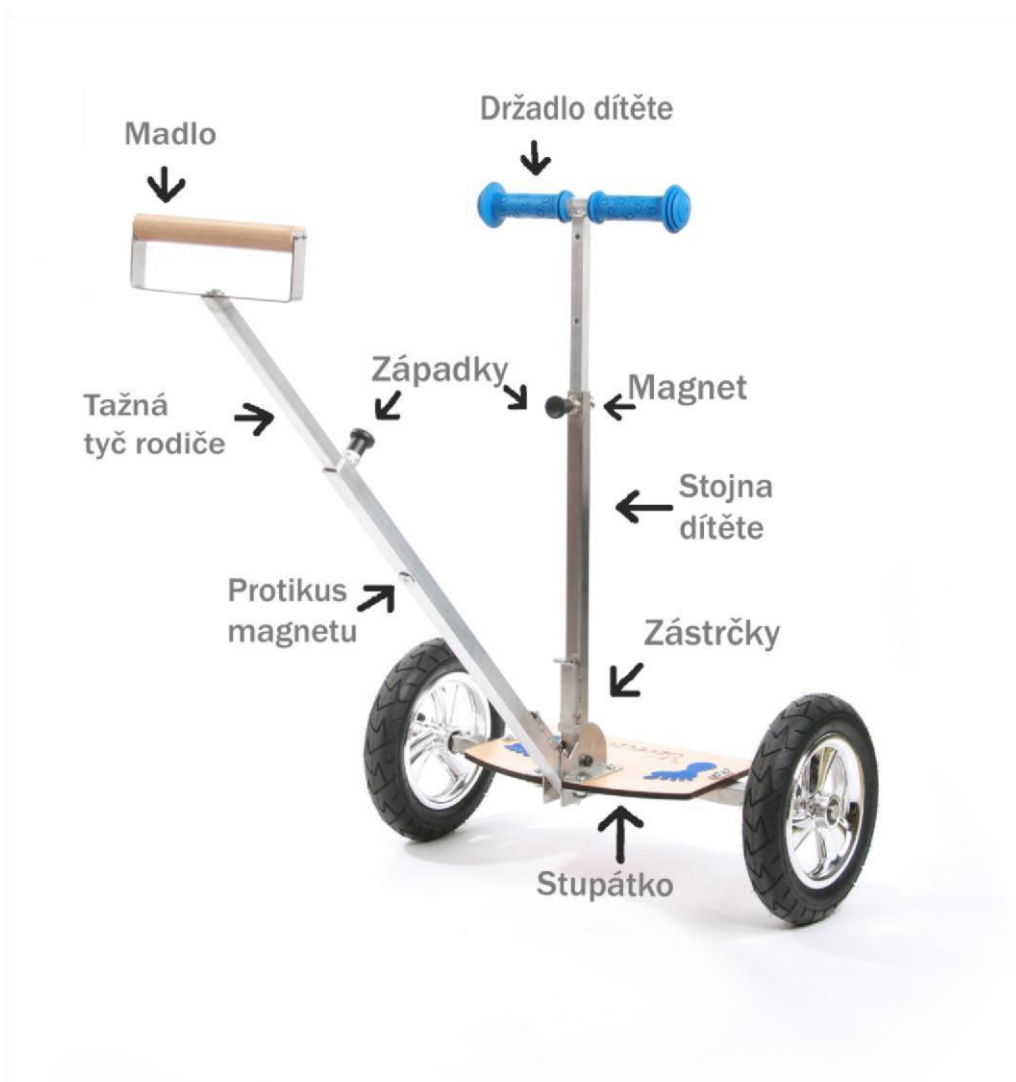

The cart is delivered in an already assembled state, so it is only necessary to install it into a standby state.

LAYOUT

Grasp the cart by the parent's drawbar with one hand and by the child's handle with the other hand in the place where they are connected by a magnet. Disconnect them by pulling the drawbar, hold the cart and move your hands to the plugs. At the same time, open the drawbars until they hit the bulkheads to prevent further movement. By your thumbs insert both plugs concurrently so that their ends are slipped in behind the bulkheads as much as possible.

Place the cart with its two wheels on the ground. Set the parent's drawbar to the desired length so that your child's footrest is in a horizontal position (even when driving), taking into account the height of your grip. This adjustment is made by pulling the inner bar with the handrail after lifting the latch and by its lowering when the rod is extended to the desired length so that the latch pin fits in one of the holes of the inner rod.

Adjust the child's handle similarly. When holding the handle the child should have the elbow at an approximately right angle. The height of the handle must be adjusted so that the child's chin exceeds the minimum of 20 cm and more.

TIP:



For more information how to fold and unfold the cart please check the video on www.vozeczech.com

Standing folded cart, perspective from the front and from the side



FOLDING

When putting the cart back into a folded state (hereinafter "FOLDING") do the opposite.

1. First slip in the drawbar. Make sure that the latch clicks into the last hole located just below the handrail.

2. It is not necessary to always slip in the child's handle. It can be kept in a preset position for the next quicker entry of the cart into a standby state.
3. With both hands grasp the cart in place of its plugs, slide them out, fold the bars together until they engage the magnet.



TIP:

The cart can be placed vertically on a flat and stable surface after folding. Make sure that the cart does not fall.



TIP:

Removing the wheels for easier transport (eg in the car trunk) can be done by partially loosening the adjusting screws and extending the wheel axes. It is also possible to completely extend the parent's drawbar with the handrail and the child's handle, which can be stored separately with the wheels. Be careful not to lose these parts!

GENERAL RECOMMENDATIONS

Before each trip, take into consideration the physical fitness and the health condition of your child. Teach your child riding on the cart successively, particularly if the child has walked alone for a short time.

While driving, be careful so that the child has nothing in his/ her hands and holds tightly to the handle with both hands. Make sure that the child has both feet slightly apart, stands on the marked footprints and does not lean to the sides too much. Teach the child to have a slightly bended knee particularly on an uneven terrain. Stretching in knees can cause knee joints and ligaments damage.

Do not inflate the wheels too much. Softer tyres better absorb crashes.

We recommend that the child wears a properly fitted helmet before getting on the cart and while riding. Always pull the cart cautiously, or direct the child if he/ she behaves in contradiction to this manual. Adhere to safety regulations to prevent falls or crashes causing injury to the child.

In front of the obstacle (eg. getting on and getting off the curb), slow down and tell the child to hold tightly and bend knees. Turn vertically the parent's revolving handrail to the direction of travel - you can maneuver it better and turn your face towards the child. When pulling on an even and a smooth terrain, you can have the handrail turned in the direction of travel. When driving from the steep hill hold the handrail with both hands behind your back turned vertically to the direction of travel and keep it braced by your hips. Please note that when driving to/ from a steep hill you may need to re-set the length of the parent's drawbar so that the child's footrest is in a **horizontal level**.

When driving along busy roads, pay extra caution, pull the cart in hand which is further from the road, and observe more often the behaviour of your child. It is important to realize that a child's temperament and desire for physical activity can lead to unexpected situations for which the manufacturer can not be responsible.

When driving in the terrain, be careful not to run into a big stone or go off the trail. On transverse unevenness, drive vertically to the obstruction, optimally that both wheels run into

unevenness at the same time. When getting off the curb (sidewalk) face your child, grasp with both hands the rotating handrail and slowly get off the curb.



TIP:

If you carry the cart in your hand, it is more comfortable to carry it by the child's handle. When folded you can also clamp it to the back of the backpack if it is equipped with additional straps (eg. for a helmet). You can also use a shoulder strap which does not have to be taken off after unfolding. You can fasten it to the parent's drawbar as show below.



WARNING

- Use only an assembled and a complete cart for the ride.
- The cart is not a means of transportation and must therefore not be used in road traffic.
- Do not leave the cart in the rain, do not expose it to unnecessary humidity.
- Avoid dropping the cart on a hard surface.
- Before driving, make sure that catches firmly secure the child's handle and the parent's drawbar and thus prevent a spontaneous sliding out.
- The child must have closed shoes when riding.
- Do not attach the cart to the bike or even motorized vehicles at any time. The cart is solely intended for pulling by a human force. The speed of pulling is limited by the person's own motion.
- Do not use roller skates or roller skis when pulling the cart.
- A man can not ride on a Segway, Howerboard or other similar electric vehicles while driving the cart.
- Do not allow the child to manipulate the folding mechanism in any way. Be careful so that a child on a cart does not kick plugs by feet - this could result in releasing the handle and drawbar and cause the child to fall down!
- Only adults can operate the folding mechanism. Pay attention to your fingers when folding and unfolding the cart. There is a risk of suffering fractures and bruises!

- If small children have been able to remove small parts from the cart, there is a risk that they may swallow them.
- A strong neodymium magnet is placed on the baby's footrest. This can affect the function of various electronic devices, or destroy them if they get close to it! For example, memory and credit cards, watches, computers, cameras, or pacemakers are at risk.
- The cart is not a toy, so do not leave it unattended with children. The cart can only be used when a child is supervised by an adult.

ADDITIONAL INFORMATION

- The recommended age of a child on the cart is approximately 1.5 to 4 years of age. • Maximum load capacity is 20 kg. Do not exceed the weight capacity!
- Even though the cart does not require much maintenance under normal conditions, it is necessary to regularly check all its parts. Check that all nuts and bolts are tightened before each ride. We do not vouch for loose and lost parts, or damage and injury resulting therefrom.
- Make sure the wheels are properly fastened and show no signs of damage.
- For smooth running it is necessary to keep its metal parts clean and dry. You can clean the cart with standard water-soluble detergents, but do not expose the wooden handle and the baby's footrest to excessive humidity. Never use any solvents or aggressive detergents.
- The cart is exclusively designed for the transport of one child (unless it is a twin variant).

WARRANTY TERMS AND CONDITIONS

The manufacturer provides a warranty period of 24 months from the date of sale. During the warranty period, the manufacturer is the one to decide whether the product under the warranty is repairable or whether it will be replaced.

The warranty does not apply to damages related to:

- improper use, exceeding the carrying weight capacity, the use for any purpose other than specified or inconsistent with these instructions for use,
- normal wear and tear
- inappropriate repairs or interference
- improper folding or unfolding of the cart
- rough handling (eg. excessive jumping, running over the curbs higher than 10cm), insufficient maintenance

WARRANTY SERVICE

- Keep an accounting document - it is your sales receipt and must be submitted when applying the warranty (claim)
- Your seller will inspect the defect and will suggest next steps.
- If your warranty has not expired and your seller decides that the defect is due to a material error or processing, your cart will either be repaired or exchanged for the same or equivalent model.
- If your cart's complaint is not recognized as justified, your seller will offer you new spare parts. In case of interest he can also carry out the installation.